



# Canopy Set-up



## STEP 1:

Remove frame from box and set on a level surface with enough room to expand without obstruction.



## STEP 2:

With one or two people, grasp the sides of the frame, lift slightly and slowly pull outwards until the frame is slightly expanded.



## STEP 3:

Grasp the lower "V-trusses" of the frame, lift slightly and slowly pull backwards until the frame is expanded to full capacity.



**NOTE:**

*The frame should NOT appear “tight” at this point.*



**STEP 4:**

Lock each of the corner sliders into place by holding the leg of the frame with one hand and pushing the slider upward until the pin clicks into place.


**Note:** *to unlock, simply pull the pin ring to release the pin.*



**STEP 5:**

Gently place your foot on each of the foot plates. Raise each of the legs by sliding the leg upward until the pin “clicks” into the various height points. To raise the leg to next level, depress the pin and slide the leg upward to the desired height.

# Siderail Set-up

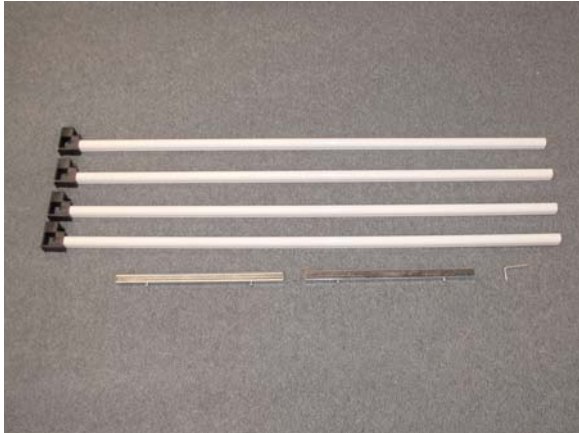

## **SIDERAILS:**


Siderails are comprised of 4, 5 foot pieces, 2 metal "joiner" posts, and four brackets attached to one end of each rail.

An Alan Key is also required (included).



## **STEP 1:**

Two of the brackets attach to the canopy leg as is. Simply unscrew the lock pin, open the bracket, place the bracket around the leg of the canopy so that the nub on the bracket inserts into the height adjustment pin hole on the leg. Close the bracket and tighten the lock pin.

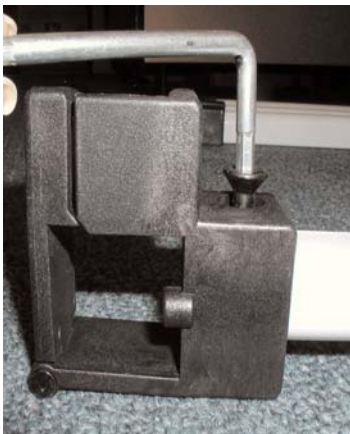

## **STEP 2:**

For the opposite side of the rail, the bracket must be removed and rotated.

Remove the lock pin. Unscrew and remove the bracket using the Alan Key



### STEP 3:

Using the metal "joiner" post, connect the second piece of the rail to the rail already attached to the canopy leg.



### STEP 4:

Attach the second bracket to the opposite canopy leg so that the nub on the bracket inserts into the height adjustment pin holes on the leg of the canopy.



### STEP 4:

Insert the siderail into the bracket opening, close the bracket and insert and tighten the lock pin.

*Note: You will not require the bracket bolt previously removed.*



### FINISH:

Attached the siderails and back wall using the Velcro tabs.